 
 


STARTUP CHECKLIST

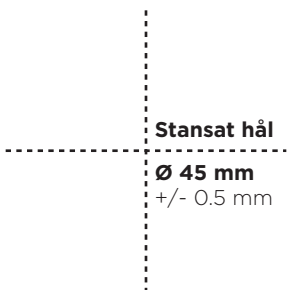

ZERO PITCH & ROLL ANGLES?

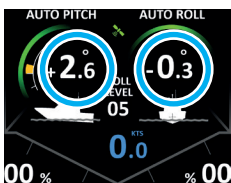 


NO → RESET → **FLIP** →

YES




CORRECT BOAT DATA?

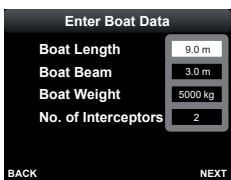

- A: Press MENU
- B: Select AUTO Setup
- C: Select Boat Data
- D. Change if incorrect



 GREEN GPS SYMBOL?

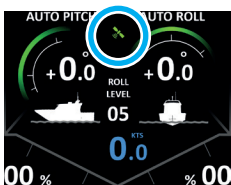


NO → SOURCE → **FLIP** →

YES



 IS AUTO MODE ON?

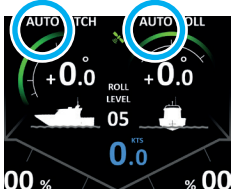

NO →



YES

 


GO!




GO!

STARTUP CHECKLIST

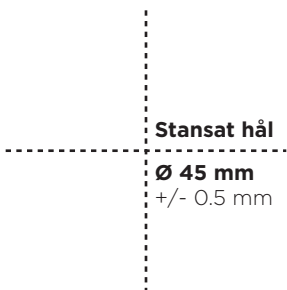

RESET PITCH & ROLL ANGLES

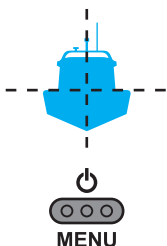 

A: Level the boat

B: Press MENU



C: Reset Pitch & Roll



CHANGE GPS SOURCE



A: Press MENU



B: Select GPS Source

C: Change Source



Refer to the Operator's Manual provided with your Zipwake System for full instructions and safety warnings.